



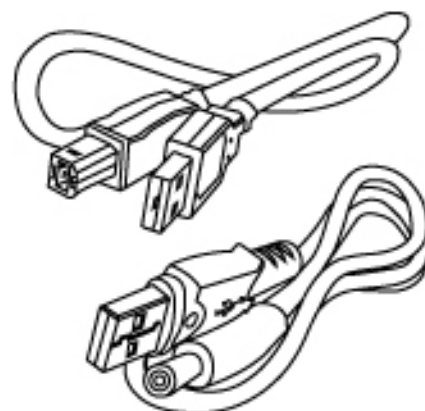

Advanced Skyline Technology Ltd.

USER GUIDE

TRAY-LOAD TYPE DVD ROM DRIVE

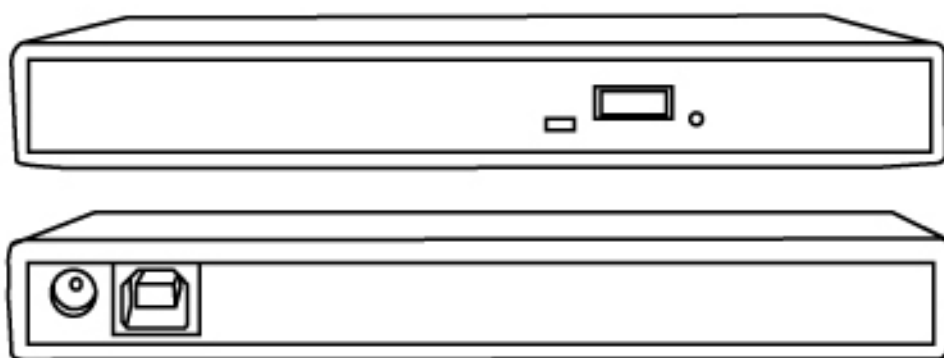



Advanced Skyline Technology Ltd.


USER GUIDE

EXTERNAL DVD ROM/RW DRIVE

Follow these steps to connect, install, and use your tray-load external DVD ROM drive and device software.

1

Your AST quality refurbished computer has been equipped with an (d) **external DVD ROM/RW* drive**.

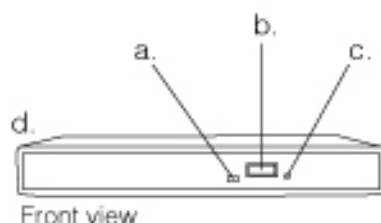


*Depending on your drive model.
**a, b, c explained in the following step.

2

- a. **Status LED** - Indicates drive's status. Blinking LED means the drive is writing/reading data.
- b. **Eject button** - Push this button to eject the disc drawer
- c. **Emergency eject hole** - Used when eject button does not work or drive has no power. Always ensure power is OFF when performing manual eject.

3

Take the 'drive input & USB' cord and plug the (e) **driver input** into the (f) corresponding port on the rear of the DVD ROM drive.

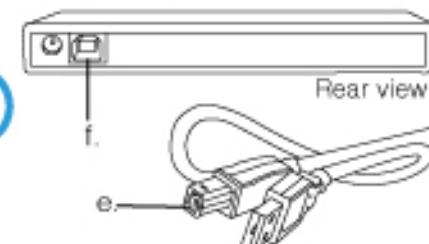

Plug the USB end into any USB port on your computer or into a USB hub.

4


Your computer will automatically install the driver software. (g)



The DVD ROM drive will be listed under the Devices with Removable Storage category on you PC.

5

NB: The **drive designation letter** will vary depending upon your PC configuration.

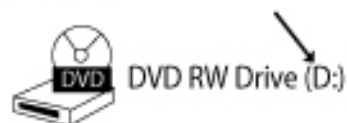

If you use a USB hub or have multiple USB devices plugged into the USB ports on your computer it may be necessary to use the supplementary power cable to provide adequate power to your external DVD drive.

6

To connect the drive to your computer or USB hub, plug the (i) **barrel end** into the (j) corresponding jack on the rear of the external DVD ROM drive and the USB end into any available (k)

